

35 KEYBOARD SEND-RECEIVE (KSR) AND RECEIVE-ONLY (RO)

TELETYPEWRITER SETS

INSTALLATION

CONTENTS	PAGE
1. GENERAL	1
2. INSTALLATION	1
CABINET	1
FRICTION FEED TYPING UNIT . . .	1
SPROCKET FEED TYPING UNIT . .	2

1. GENERAL

1.01 The 35 Receive Only (RO) sets and the Send Receive (KSR) sets are each packed in two packages; one contains the cabinet and the other the typing unit. For sprocket feed sets, the modification kit for equipping the cabinet with paper supply and accumulating shelf is edited separately. Mounting hardware and other loose parts may be in a cloth bag and tied to the unit or wrapped separately and packed in the same carton.

2. INSTALLATION

CABINET

- 2.01 Place packing carton so that the top side of carton is up.
- 2.02 Clip the bottom metal strap.
- 2.03 Lift the corrugated tube and top cap of the packing carton up.
- 2.04 Remove and set aside the lower compartment panel and offset copyholder which are packed separately within the carton.
- 2.05 Roll unit over on a soft surface to prevent scratching. Remove the bolts which fasten the feet or pan to the pallet and remove the pallet.
- 2.06 Set the unit upright. Remove all tape and wrapping from the set and components.

2.07 Raise upper cover on cabinet.

2.08 Remove the four shipping screws, washers, and spacers which fasten the base mounting brackets rigidly to the cradle for shipment.

TYPING UNIT

2.09 Unpack the typing unit.

INSTALLATION (FRICTION FEED)

NOTE: The typing unit can be installed with the upper cover open. If it becomes necessary to gain access to the rear of the typing unit or base, the lower cover may be removed. Remove call control unit bezel before attempting to remove lower cover. The cover weighs approximately 30 pounds. To remove the lower cover, unlatch the lower cover latch inside the cover, close the upper cover to latched position. Loosen the hinge lock bracket mounting screws and slide the bracket away from the hinge. Support the cover from the rear. Raise the lower cover at front. Remove the acorn type nut from the upper stop arm stud and disengage the arm from the cover. Move the cover sideways to separate it from the pins on the hinge.

2.10 Set typing unit on base in cabinet.

2.11 Refer to appropriate section on 35 Keyboard and Base for Keyboard Send Receive Only Sets to make adjustments between Typing Unit and Base, or between Base and Answer Back.

2.12 Secure Typing Unit to base with the four mounting screws furnished with the base.

2.13 Refer to appropriate section on 35 cabinet for Keyboard Send Receive and Receive Only Sets to make adjustments for Bubble Position Front and Rear (Final), Upper Cover Latch, Paper Guide, and Window (Final).

2.14 Install paper roll.

INSTALLATION (SPROCKET FEED - See Note above on removal of lower cover.)

2.15 Install the form accumulating shelf to the back of the cabinet according to instructions in the installation specification furnished in the carton with the shelf.

2.16 Install the sprocket feed rear paper guide as outlined in the specification furnished with the paper guide. Disregard references to terminal blocks in the cabinet.

2.17 Substitute the form guide, furnished with the sprocket feed typing unit, for the paper guide mounted to the bubble on the cabinet.

2.18 Set typing unit on base in cabinet.

2.19 Refer to appropriate section on 35 Keyboard and Base for Send Receive and Receive Only Sets to make adjustments between Typing Unit and Base, or between Base and Answer Back.

2.20 Secure the typing unit to base with the four mounting screws furnished with the base.

2.21 Refer to appropriate section on 35 cabinet for Keyboard Send Receive and Receive Only Sets to make adjustments for Bubble Position Front and Rear (Final), Upper Cover Latch, Paper Guide, and Window (Final).

2.22 Refer to appropriate section on 35 cabinet for Keyboard Send Receive and Receive Only Sets to make adjustments for Form Guides.

2.23 Install sprocket feed paper. Make sure that the paper out and low paper levers rest on top of the paper.

2.24 Make the final window adjustment for sprocket feed sets.

2.25 Install the offset copyholder previously removed.

2.26 Install the lower compartment panel by sliding it into place over pivots on each side of the pedestal and fastening it at the top by means of the push button fastener.

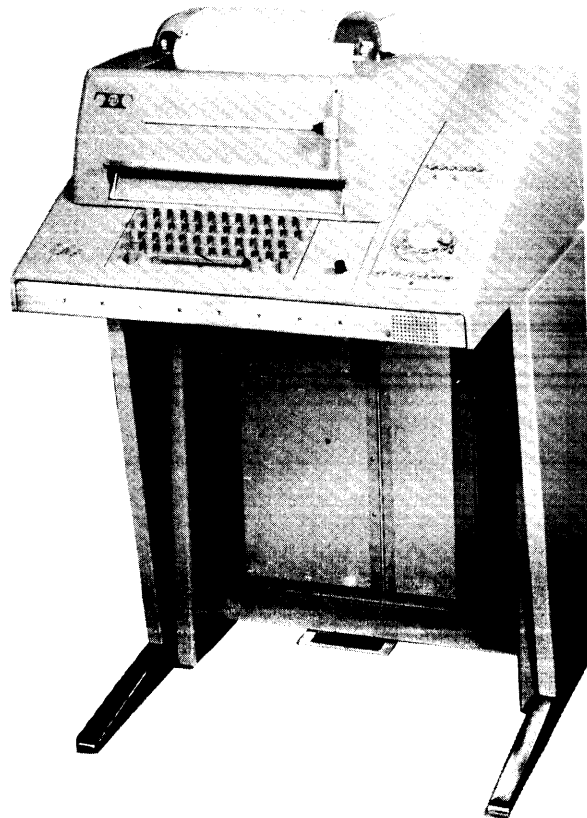


Figure 1 - 35 Send-Receive Page Printer Set